



Simple Instructions for Alarm Systems

Alarm System:
Caddx 8980

Keypads:
8981 LED



To Arm and Leave:

Enter 4-digit code

To Arm and Stay Inside with Delay:

1. Press "Bypass" "*" "
2. Enter zone number(s) of motion detectors
3. Press "*" "
4. Enter 4-digit code

To Silence Alarm:

Enter 4-digit code

To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

To Change User Code for User 1:

1. Press "*" "1" "#"
2. Enter old master code
3. Press "*" "1" "#"
4. Enter new master code
5. Press "*" "1" "#"

To Disarm System:

Enter 4-digit code

To Arm and Stay Inside with NO Delay:

1. Press "Bypass" "*" "
2. Enter zone number(s) of motion detectors
3. Press "*" "
4. Enter 4-digit code
5. Press "*" "

To Clear Alarm Memory:

Press "#"

To Bypass a Zone:

1. Press "*" "
2. Enter zone number
3. Press "*" "

To Change User Code for User 2:

1. Press "*" "2" "#"
2. Enter master code
3. Press "*" "2" "#"
4. Enter new code
5. Press "*" "2" "#"