



# Simple Instructions for Alarm Systems

**Alarm System:**  
Caddx 8980E

**Keypads:**  
8981 LED



## To Arm and Leave:

Enter 4-digit code

## To Arm and Stay Inside with Delay:

1. Press "Bypass" "\*" "
2. Enter zone number(s) of motion detectors
3. Press "\*" "
4. Enter 4-digit code

## To Silence Alarm:

Enter 4-digit code

## To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

## To Change User Code for User 1:

1. Press "\*" "1" "#"
2. Enter old master code
3. Press "\*" "1" "#"
4. Enter new master code
5. Press "\*" "1" "#"

## To Disarm System:

Enter 4-digit code

## To Arm and Stay Inside with NO Delay:

1. Press "Bypass" "\*" "
2. Enter zone number(s) of motion detectors
3. Press "\*" "
4. Enter 4-digit code
5. Press "\*" "

## To Clear Alarm Memory:

Press "#"

## To Bypass a Zone:

1. Press "\*" "
2. Enter zone number
3. Press "\*" "

## To Change User Code for User 2:

1. Press "\*" "2" "#"
2. Enter master code
3. Press "\*" "2" "#"
4. Enter new code
5. Press "\*" "2" "#"