



# Simple Instructions for Alarm Systems

**Alarm System:**  
FBI XL-2P



**Keypads:**  
XK-108

**To Arm and Leave:**

Enter 4-digit code

**To Arm and Stay Inside with Delay:**

Press "Stay", enter 4-digit code

**To Silence Alarm:**

Enter 4-digit code

**To Acknowledge System Trouble (to stop beeping):**

Enter 4-digit code

**To Change User Codes:**

1. Press "Code"
2. Enter master code (User 01)
3. Enter 2-digit user number (01, 02, 03, etc.)
4. Enter new code

**To Disarm System:**

Enter 4-digit code

**To Arm and Stay Inside with NO Delay:**

Press "Stay", press "Instant", enter 4-digit code

**To Clear Alarm Memory:**

Enter 4-digit code

**To Bypass a Zone:**

- |                       |    |                      |
|-----------------------|----|----------------------|
| 1. Press "Bypass"     | OR | 1. Press "Bypass"    |
| 2. Enter 4-digit code |    | 2. Enter zone number |
| 3. Enter zone number  |    |                      |