



Simple Instructions for Alarm Systems

Alarm System:
FBI XL-31



Keypads:
XL-4612SM, 7005

To Arm and Leave:

Enter 4-digit code

To Arm and Stay Inside with Delay:

Press "Stay", enter 4-digit code

To Silence Alarm:

Enter 4-digit code

To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

To Change User Codes:

1. Press "Code"
2. Enter master code (User 01)
3. Enter 2-digit user number (01, 02, 03, etc.)
4. Enter new code

To Disarm System:

Enter 4-digit code

To Arm and Stay Inside with NO Delay:

Press "Stay", press "Instant", enter 4-digit code

To Clear Alarm Memory:

Enter 4-digit code

To Bypass a Zone:

- | | | |
|-----------------------|----|----------------------|
| 1. Press "Bypass" | OR | 1. Press "Bypass" |
| 2. Enter 4-digit code | | 2. Enter zone number |
| 3. Enter zone number | | |