



# Simple Instructions for Alarm Systems

**Alarm System:**  
GE Network NX-8



**Keypads:**  
148E LCD, 1192E LCD

## To Arm and Leave:

Press "Exit" OR enter 4-digit code

## To Arm and Stay Inside with Delay:

Press "Stay" OR enter 4-digit code and press "Stay"

## To Silence Alarm:

Enter 4-digit code

## To Acknowledge System Trouble (to stop beeping):

Enter 4-digit code

## To Change User Codes:

1. Press "\*" "5"
2. Enter master code
3. Enter 2-digit ID (01, 02, 03, etc.)
4. Enter new code
5. Press "#"

## To Disarm System:

Enter 4-digit code

## To Arm and Stay Inside with NO Delay:

Press "Stay" twice OR enter 4-digit code and press "Stay" twice

## To Clear Alarm Memory:

Press "#"

## To Bypass a Zone:

1. Press "\*" "