



Simple Instructions for Alarm Systems

Alarm System:
Ademco Vista 10 SE

ADEMCO

Keypads:
6127, 6137 Fixed Word, 6139 Alpha

To Arm and Leave:

Enter code, press "2" "Away"

To Arm and Stay Inside with Delay:

Enter code, press "3" "Stay"

To Silence Alarm:

Enter code, press "1" "Off"

To Acknowledge System Trouble (to stop beeping):

Enter code, press "1" "Off"

To Change User Codes:

1. Enter master code
2. Press "8"
3. Enter user number (2-6)
4. Enter new code

To Disarm System:

Enter code, press "1" "Off"

To Arm and Stay Inside with NO Delay:

Enter code, press "4" "Instant"

To Clear Alarm Memory:

Enter code, press "1" "Off"

To Bypass a Zone:

Enter code, press "6", enter 2-digit zone number

To Change Master Code:

1. Enter master code
2. Press "8" "Enter" "2"
3. Enter new master code (twice)